

i Series Trim Installation Guide

Our i Series range of cassette stoves can be installed in an elevated or floor standing position. The following instructions describe how to install either of the 30mm or 60mm optional trims to the cassette stove.

Do not install whilst the stove is hot or in use. Observe safe working practices (please refer to the stove's Installation Guide) whilst installing your trim.


We recommend removing the door to ease the installation of your trim.

Parts included

Six self tapping screws



Either a four or three sided trim

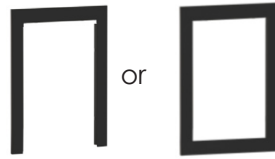

This installation guide



If your stove has pre-drilled fixing points to accept the trim screws, please skip to step 3, otherwise, follow all the steps below:

Step 1

Push the trim into position on the stove.

Ensure that it is flush against the wall in its desired final position.



Step 2

Mark where the four holes need to be drilled inside the jacket with a centre punch or similar.

Drill a 3.5mm hole at each of the four markings.



Step 3

As in step 1, push the trim into position on the stove.

Ensure that it is flush against the wall in its desired final position.



Step 4

Screw all four self tapping screws into position, tightening slightly.

Check the position of the trim and then fully tighten.

