



## Assembly Instructions for 'AH', 'AL' and 'A' Flat models

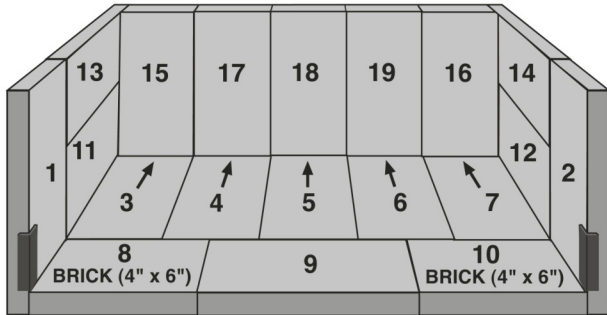

'A' model stove brick layout


There are 19 bricks to be installed in these models, 17 bricks (4.5" x 9") and 2 bricks (4" x 6"). Please place them in the numbered sequence shown in the illustration. Nos. 1 & 2 are placed vertically against the sides of the stove. Nos. 3,4,5,6 & 7 go on the stove floor pushed to the back with Nos. 8 & 10 (4" & 6") at front, one at each end with No. 9 in the middle. Nos. 11 & 12 are placed horizontally on the floor and 13 & 14 are placed on top of them. Finally place the back bricks Nos. 15 & 16 one at either side. They lock Nos. 11 & 14 in place. Fill the remaining gap with 3 bricks Nos. 17,18 & 19. All the back wall bricks can either stand on the stove floor or on top of the back wall bricks, which ever you prefer.

In the KITCHENER - All the floor bricks, Nos. 2, 4, 7 & 8 should be placed to the front of the stove so that the back wall bricks, Nos. 9, 10, 11 & 12 can be positioned and lifted up behind the retaining brackets. Now slide the floor bricks to the back of the stove under the back wall bricks which are now held securely in place. You may need someone to hold the bricks in place while you complete the assembly. When finished ensure retaining brackets are tightened.

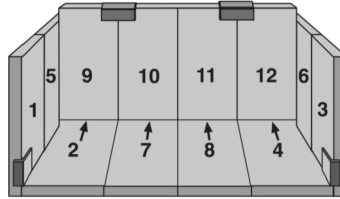

Kitchener brick layout


In the BERKLEY there are 12 bricks to be installed. Nos. 1 & 2 are placed horizontally under the grate support brackets. Please ensure these bricks are pushed firmly to the back of the stove. Place Nos. 3 & 4 horizontally on top of the grate support brackets, making sure they are pushed firmly to the back of the stove. Nos. 9, 10, 11 & 12 are placed vertically at the back, sitting on the floor of the stove. Nos. 5, 6, 7 & 8 are placed on the Floor of the stove pushed firmly to the back.

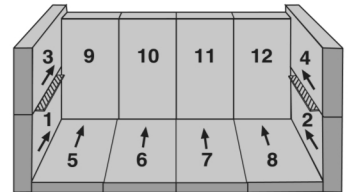

Berkley brick layout


## Assembly Instructions for 'BH', 'BL' Flatmate, Kitchener & Berkley models

There are 12 bricks (4.5" x 9") to be installed. In all these models, Nos. 1 & 3 are placed against the stove sides and slid forwards to be held behind the retaining lugs. Nos. 5 & 6 are placed next to them also standing on the floor. The remaining bricks will hold each other

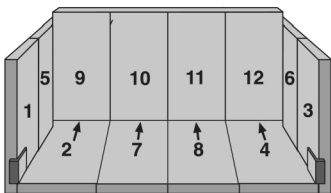

'BH' & 'BL' model stove brick layout

In the 'BH' & 'BL' all the stove floor bricks, Nos. 2, 7, 8 & 4 are pushed to the back, with the back wall bricks Nos. 9, 10, 11, & 12 sitting on top of them.

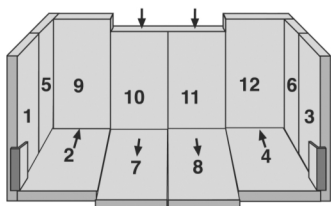


Flatmate brick layout

In the FLATEMATE - Floor bricks Nos.2 & 4 should be pushed to the back of the stove floor so that Nos.9 & 12 rest on top of them, while Nos. 7 & 8 are pulled to the front so that Nos. 10 & 11 sit on the stove floor behind them. The reason for this is so the lugs on either the flue collar or hotplate (whichever you are fitting to the rear of the stove) are correctly aligned when this aspect of the assembly is completed.

## Assembly Instructions for 'C' wood burning models


There are 10 bricks (4.5" x 9") to be installed. Nos. 1 & 2 are placed against the stove sides, standing on the floor and slid forwards to be behind the retaining lugs. Nos. 6 & 7 are placed next to them also standing on the floor. Nos. 3, 4 & 5 are placed on the stove floor and pushed to the back, so that Nos. 8, 9 & 10 rest on top of them.

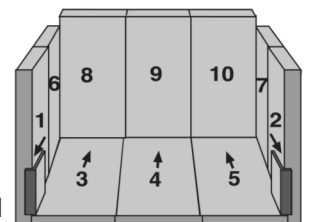

'C' Wood burner brick layout

## Assembling and Installing the grate for the Berkley

The grate rests on the grate support brackets, make sure the curved edge faces the front with the lugs pointing upwards.

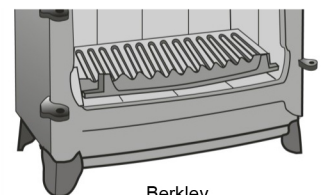

Berkley